

## Instructions for Trigger Tension Adjustment:

**Stop: make no adjustment with the release attached to the bow at full draw.**

### Increase Trigger Tension:

Turn hollow Tension Set Screw clockwise. **Do not turn Ser Screw inward past flush with flat surface more than three full turns.**



Figure 1

### Decrease Trigger Tension:

Turn hollow Tension Set Screw counter clockwise. **Note: If tension is too low, the release cannot be cocked.**



Figure 2

### Change Tension Spring:

Turn hollow Tension Set Screw counter clockwise and remove Spring.



Figure 3

### Replace Tension Spring:

Reinstall spring and hollow Set Screw as shown in figure 4. It is possible to use a small amount of **very weak** thread locking compound on the outside of the hollow Set Screw, before installation.

Turn hollow set screw clockwise (Fig. 5) **Do not force the Set Screw during installation. The hollow Set Screw should go in with very little force. If screw is forced, the threads could be damaged.**



Figure 4



Figure 5



Figure 6  
(Complete)

## Product/Service Information

CCPorter Inc.

P.O. Box 2  
Covina, Ca 91723  
Phone: 626-966-8138

Email: [chris@thecenterx.net](mailto:chris@thecenterx.net)